



INSTRUCTION MANUAL PG8200 PG8250



PARTS LIST



SROLLER FRAME



BACK TRAY



FRONT WHEEL ASSEMBLY (2)



REAR AXLE ASSEMBLIES



REAR WHEELS (2)



RETAINER WASHER



RETAINER CAP



HUB CAP



SCREWS (4)



FOOT PLATE

WARNING

- For pets only
- Do not carry additional bags, goods, or accessories in or on stroller except as recommended in the manufacturer's instructions.
- Do not leave pet unsupervised in stroller.
- Before making adjustments to stroller ensure that pet's body is clear of any moving parts.
- This stroller is designed for one pet only.
- Do not hang bags from handles as this may cause product to become unstable.
- Do not use on escalator or stairs. Fold stroller and carry.
- Put on brake whenever you park the stroller.
- Ensure stroller is completely erected and check all locks are engaged before placing pet in stroller.
- Do not overload as stroller may become unstable. Maximum weight of pet using this stroller should not exceed 45 lbs.
- Do not use near and open or exposed flame.

WHEEL MAINTENANCE

- To ensure ease of maneuverability and to minimize wear and tear, keep all moving parts clean and lubricated with WD40 or light machine oil.
 - Push stroller back and forth and rotate swivels around to work in lubricant.
 - Clean the rear wheel assembly and the rest of the frame with warm soapy water; clean off with warm water and dry thoroughly.
- NOTE: Do not lubricate brake components.

TO OPEN STROLLER

Step 1. Release locking latch.



Step 2. Unfold as shown
Make sure both locks
snap into place.




TO ASSEMBLE FRONT WHEELS

Step 1. Turn stroller over as shown.

Step 2. Push wheel assembly
onto stroller leg until it snaps into place.
Tug firmly on wheel assembly to be
sure that wheel is securely in place.

NOTE: To remove, squeeze tab
and pull wheel off.

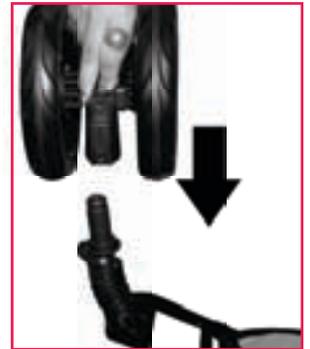

Note: Direction of
Arrow



TO ASSEMBLE REAR WHEELS



Step 1. Remove and discard protective sleeve from ends of rear axle assembly and rear leg tubes.

Step 2. Position rear axle assemblies onto rear leg tubes at the same time.



Step 2.

Step 3. Slide wheel onto axle.

Step 4. To Install Retainer Washer: Snap the retainer washer onto the axle. Make sure larger end of retainer washer is towards wheel and slot in washer lines up with rib on axle. You may need to twist the washer until it locks into place. (Figures A,B)



Step 3.

Step 5. To Install Retainer Cap: Snap the retainer cap over the retainer washer. (Figure C)



Figure A.

NOTE: If Retainer Cap does not snap completely over Retainer Washer, Wheel Assembly is NOT secure and Wheel may come off.



Figure B.

Step 6. Align Hub Cap and snap into place.



Figure C.

Step 7. Repeat for other side.



Step 6.

TO ASSEMBLE FOOT PLATE

Step 1. Turn stroller over and align the 4 holes of the foot plate with the 4 holes in the stroller frame near the front wheel.



Arrows indicate location of holes.

Step 2. Screw in each of the 4 screws making sure that the foot plate is secure.

TO ASSEMBLE BACK TRAY

Step 1. To assemble back tray first align a hole on one side of the tray with one of the bolts on the handle of the same side of the stroller.

Step 2. Snap one side of the tray over the bolt on the handle then repeat for the other side.



Arrows indicate location of bolts on stroller.

TO USE FRONT WHEEL LOCKING MECHANISM

1. To engage front wheel locking mechanism so that front wheel does not swivel (best when stroller is used for fast walking or running) pull tab up.

2. To disengage locking mechanism so that front wheel swivels (for easy steering) push tab down.

