




For The ON-THE-GO Pet™

INSTRUCTION MANUAL

ROADSTER

Pet Stroller

PG8600

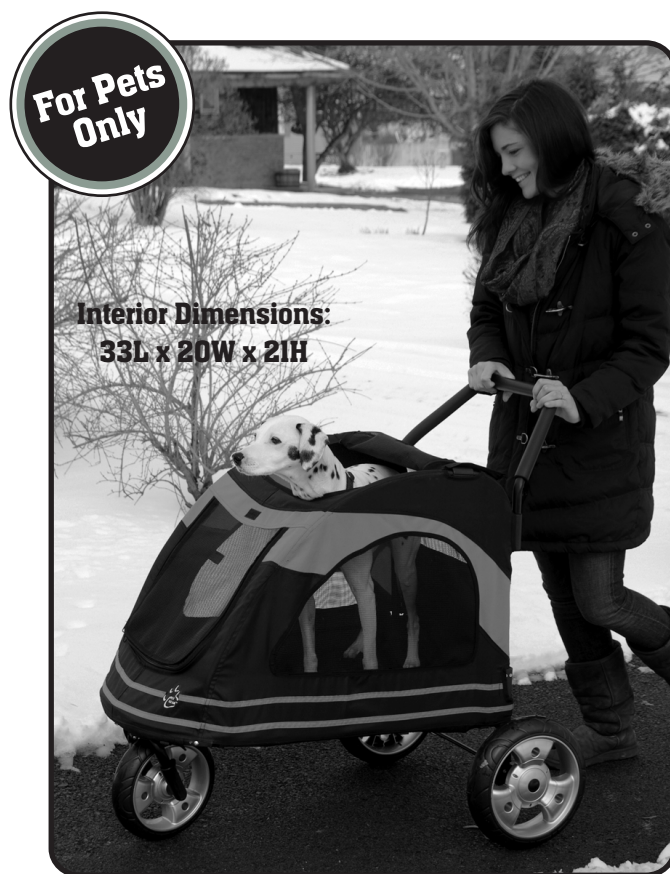

To see our full line of products, visit us online at: www.petgearinc.com

CUSTOMER SERVICE HELP DESK

customerservice@petgearinc.com

Toll-Free 877-752-9123 - Eastern Standard Time 8am-3pm, Monday through Friday

⚠ WARNING!

FOR PETS ONLY.

Not intended to be used as a restraining device for aggressive or dangerous animals that dig, chew or paw aggressively. Do not leave your pet unattended. **PET GEAR** is not liable for any damage caused by aggressive, destructive, immature or untrained animals. Do not use near an open or exposed flame. Failure to follow these warnings and the instructions could result in serious injury or death.

- Do not carry additional bags, goods, or accessories in or on stroller except as recommended in the manufacturer's instructions.
- Recommended use of an approved safety restraint correctly fitted and adjusted.
- Do not leave pet unsupervised in stroller.
- Before making adjustments to stroller ensure that pet's body is clear of any moving parts.
- This stroller is designed for one pet only.
- Do not hang bags from handles as this may cause the product to become unstable.
- Do not use on escalator or stairs; fold stroller and carry.
- Put on brake whenever you park the stroller.
- Ensure stroller is completely erected and check that all locks are engaged before placing pet in stroller.
- Do not overload as stroller may become unstable; maximum weight of pet using this stroller not to exceed 100 lbs.

PARTS LIST

Check that you have all the parts shown BEFORE assembling your product.
If any parts are missing, call Customer Service.



(1) Front Wheel




(1) Axle



(2) Back
Wheels

BACK WHEEL ASSEMBLY

1. Slide back wheel on axle as shown in Figure B. Push in axel until it clicks. Pull on wheel to make sure the wheel is engaged. Repeat on other side. When finished it should look like Figure C.

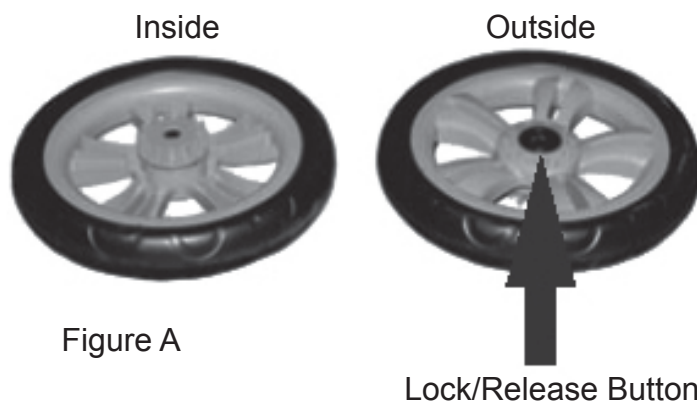

Note: To remove wheel, push the lock/release button and pull wheel off.



BACK WHEEL ASSEMBLY AND INSTRUCTIONS

2. Take rear wheels (on axel with brakes) and lock them into the 2" posts by placing leg tube over the posts and pressing down until they click (shown in Figure D). Pull up to make sure wheels are locked.

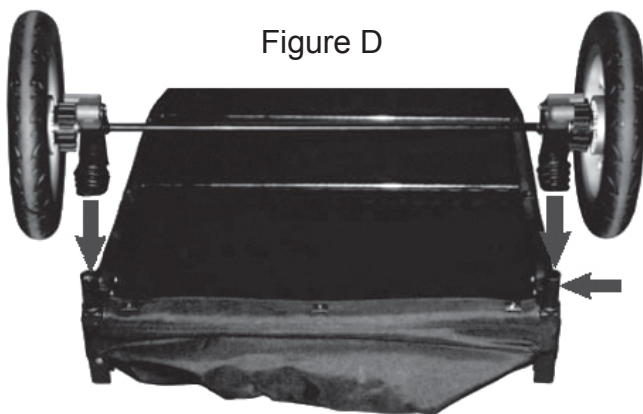


Figure D

Note: To remove back wheels, push the lock/release button and pull wheel off.

4. Lift right and left side of stroller up. Shown in Figure F. Secure the support bar that goes from the left and latches down on the right side (shown in Figure F).

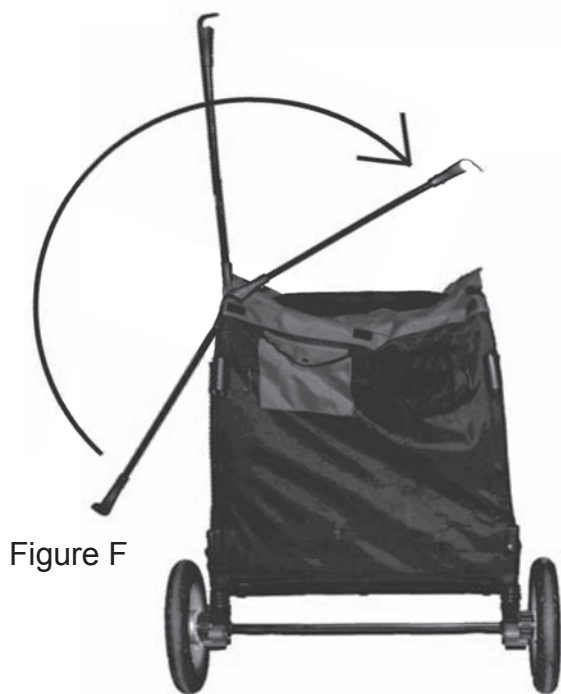


Figure F

3. Place stroller so wheels are on the ground and back wheels are facing you (shown in Figure E).



Figure E

5. To install the handle, place handle ends into the handle-locking mechanisms on each side of the stroller. Then, push down until you hear a click and the velco buttons pop out on each side. From here, you can choose desired height level (1 or 2). Pull up on handle to make sure it is securely locked. This is shown in Figure G.


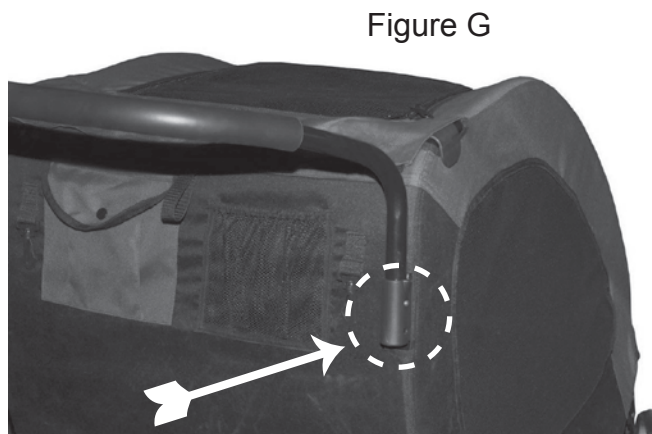


Figure G


Handle-Locking Mechanisms

FRONT WHEEL ASSEMBLY AND INSTRUCTIONS


6. To attach front wheel, slide plastic wheel support up and into tubing.

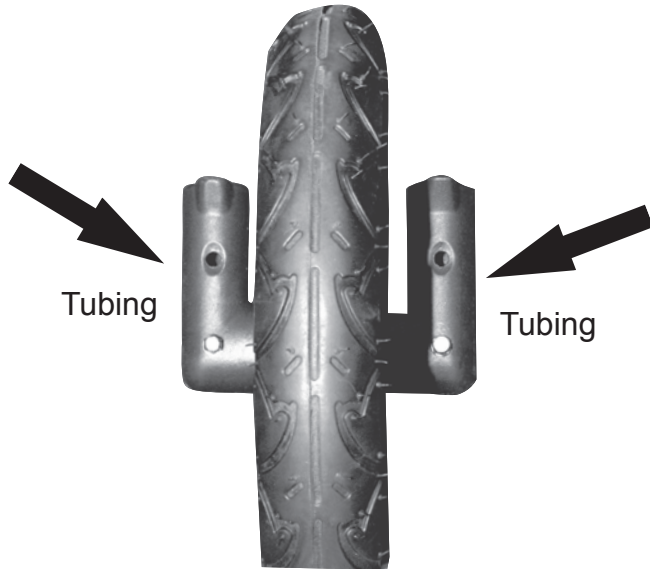


7. Slide wheel up, until velco pins pop out of holes.

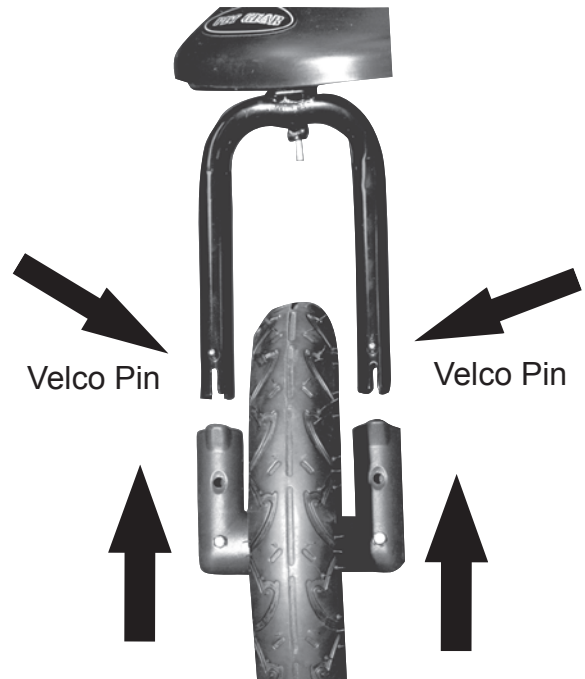

8. To use stroller in locked position for jogging, push pin in.

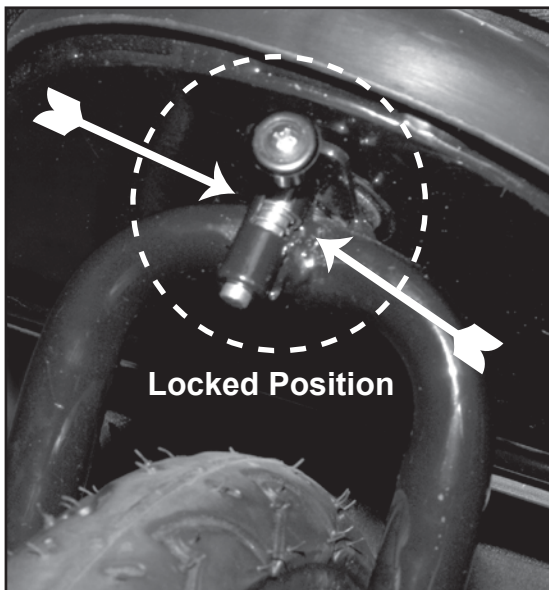


9. To use stroller in swivel position, pull pin down, and to the right.

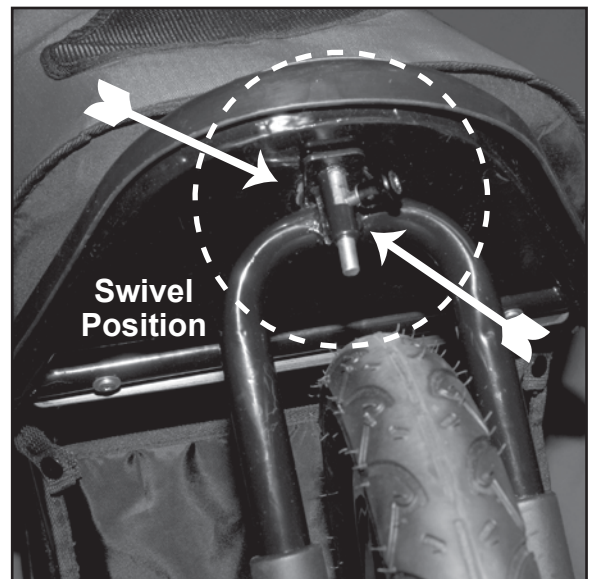


TO FOLD/PACK UP STROLLER

1. Remove handlebar, by pushing velco pins in to release. Pull handlebar up and off.

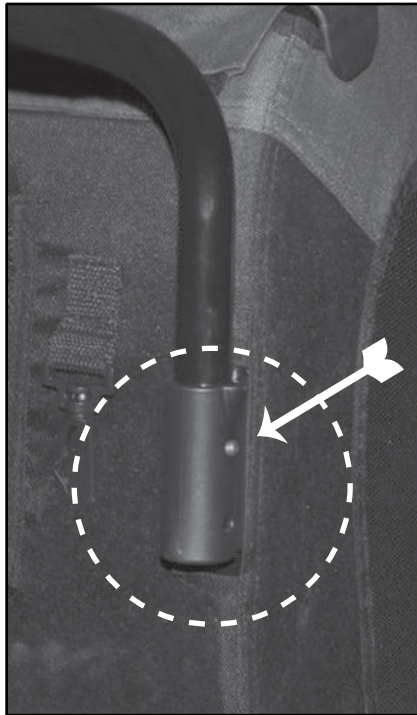

2. Pull support bar up to release and continue to swing the bar counter-clockwise.

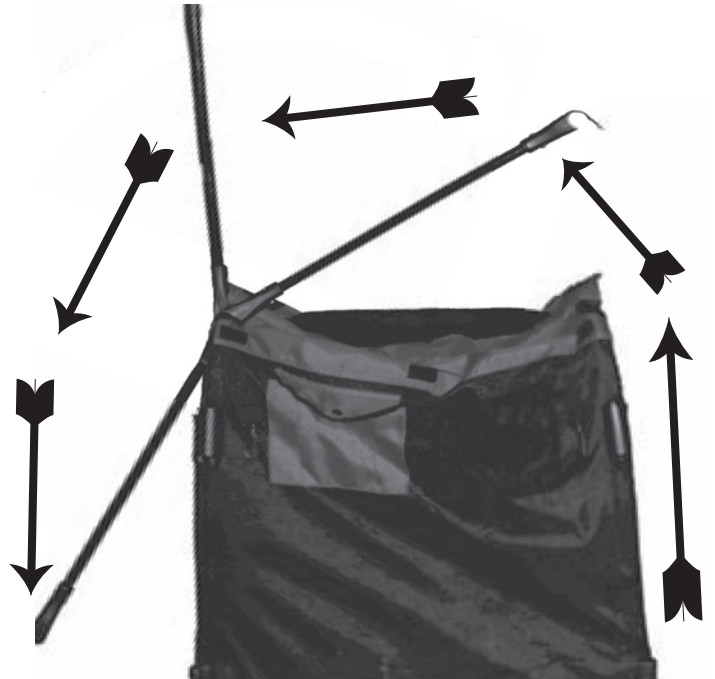

3. Fold sides inward, until flat, as shown below.



LOOKING AFTER YOUR STROLLER

- Always store product in a clean, dry place.
- Not recommended for use on the beach.
- Do not put heavy items on top of the stroller.
- Clean frame by wiping with a lightly oiled cloth.
- Do not use detergent or abrasives. Spot clean fabric with dry cleaning fluid or mild soap and warm water.
- To ensure easy maneuverability and to minimize wear and tear, (especially wheels, axles, and swivels), keep all moving parts clean and lubricated with WD40® or light machine oil.
- NOTE: Do not lubricate brake components or swivel locks.
- Regularly check stroller for loose parts. These should be tightened or replaced.

WHEEL MAINTENANCE

- To clean and lubricate front and rear wheels, push out locking lever under wheel housing to release rear wheel.
- To ensure ease of maneuverability and to minimize wear and tear, keep all moving parts clean and lubricated with WD40® or light machine oil.
- Push wheel sets back on until they click and lock in position; pull on wheel housings to ensure they are secure.
- Push stroller back and forth and rotate swivels around to work in lubricant.
- Clean the rear wheel assembly and the rest of the frame with warm, soapy water; clean off with warm water and dry thoroughly.
- NOTE: Do not lubricate brake components or swivel locks.

REPLACEMENT PARTS

Please have your model number ready before calling. Use only **PET GEAR** replacement parts.



PO Box 99
West Rutland, VT 05777
877-752-9123
www.petgearinc.com

